

**OPREMA ZA
IZVRŠNE ORGANE****PNEUMATSKI POZICIONER Tip 654.1, 779.1**

Tip	Ulazni signal (Bar)	Izlazni signal (Bar)	Napajanje (Bar)	Ugradnja	Napomena
654.1	0.2 ÷ 1	0.2 ÷ 1.5	1.4 ÷ 2	Spolja	sa manometrima
					za ulazno izlazni signal i pritisak napajanja
779.1		0.2 ÷ 1.4/4/6	1.4/4/6		opciono sa manometrima za ulazno izlazni signal i pritisak napajanja opciono sa "by pass"-om

**I/P PRETVARA Tip 789**

Tip	Ulazni signal (mA)	Izlazni signal (Bar)	Napajanje (Bar)	Ugradnja
789	0.4 ÷ 20	0.2 ÷ 1	1.4	Spolja

**A.D. INSA - INDUSTRIJA SATOVA**

Trš anska 21
11080 Beograd - Zemun
Republika Srbija



www.insa.rs



+ 381 (11) 2612 - 422
+ 381 (11) 3713 - 606
+ 381 (11) 3173 - 607
+ 381 (11) 2614 - 330

Fax:

E-mail: office@insa.rs
info@insa.rs